



STEP 1

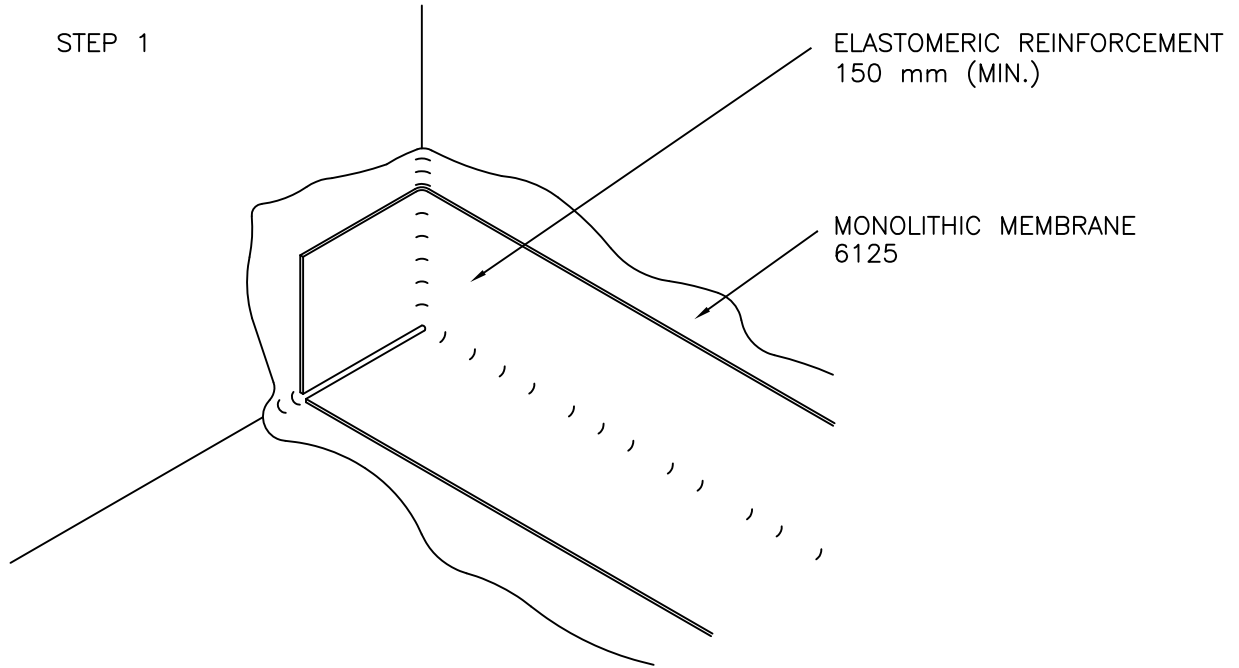

STEP 2

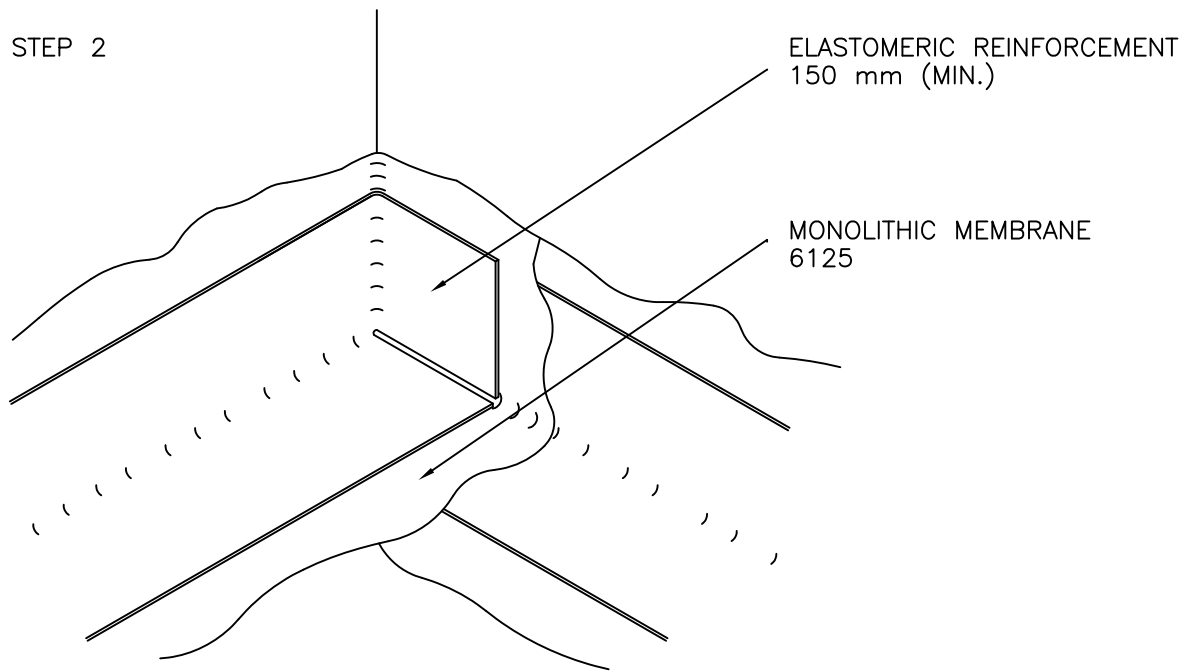

STEP 3

COMPLETELY ENCAPSULATE ALL EXPOSED REINFORCING WITH A TOP COATING OF MONOLITHIC MEMBRANE 6125. NO REINFORCING SHOULD BE LEFT EXPOSED OVERNIGHT.



MONOLITHIC  
MEMBRANE  
#6125  
WATERPROOFING SYSTEMS

INSIDE CORNER  
REINFORCEMENT

HYDROTECH MEMBRANE CORP.

NO SCALE

WC-13A